



YOUR NEW GT



Congratulations on purchasing your new Triple Dog Gauge Tuner (GT)!

This guide will help you install and enjoy your new GT quickly and easily. More detailed information is also available in the online Owner's Manual at www.bullydog.com. Ready to get started? Use the Quick Install Guide on the other side of this page to guide you through the installation in no time!

CUSTOMIZE YOUR GT'S LOOK AND ABILITIES

A-PILLAR PODS



RAM SUCTION CUP



DASH PODS



MIRROR MOUNTS



QUICK INSTALL GUIDE

BULLY DOG BIG RIG

Bully Dog also offers a range of products for Caterpillar®, Cummins®, Detroit®, and Paccar®-powered big rigs.

ELECTRONICS

Bully Dog has heavy duty versions of both its WatchDog and GT products.



TURBOS

Bully Dog has high-flow turbos for both CAT® and Cummins® applications.



MANIFOLDS

Bully Dog has premium ceramic-coated exhaust manifolds for many applications.



Not legal for sale or use in California on pollution-controlled vehicles.

NEW: VEHICLE SENSOR DOCKING STATION



ACCESSORIZE WITH GREAT BULLY DOG GEAR

HOODIES



HATS



T-SHIRTS



STICKERS



BREATHE EASIER



RAPID FLOW INTAKES

The Bully Dog Rapid Flow Cold Air Intakes are cutting-edge enclosed intake systems that deliver cool, dense air to your vehicle's engine. Designed to work with your GT. These intakes fit with Ford, GM, Dodge, and Nissan models.

Rapid Flow

- More air
- More power and torque
- More fuel efficiency

Cold Air

- Cooler, fresher air
- Better performance
- Lower exhaust gas temperatures (EGT's)

Not legal for sale or use in California on pollution-controlled vehicles.

SAVE YOUR FILTER



Clean and re-oil your filter instead of replacing it! Use the easy spray and rinse Filter Cleaner to clean your filter, and then use the filter oil to ensure clean air is delivered to the engine.

RFI™ PREFILTER

The Bully Dog RFI™ Prefilter is a semi water-repellent barrier that will keep out bugs and debris while lengthening the time between filter cleanings and reducing the amount of time you spend cleaning the filter.



More info on Bully Dog products can be found on our website at bullydog.com

A: PRE-INSTALL CHECKLIST

Confirm that you have all the parts listed below, and then update your GT (B).



Tools You May Need:

- Fuse Puller*
- Voltage Tester
- Battery Charger
- Pliers

*Different fuse tap may be required for mini style fuses.

B: UPDATE YOUR GT


1. Install the Update Agent on a Windows computer.

(www.bullydog.com/update_agent.php)



2. Plug in the card reader.

Plug the MicroSD card into the reader, and insert the reader into your computer's USB port. Or plug in your device via USB with SD card in the unit.

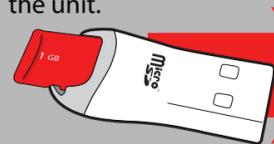


3. Open the Update Agent

Launch the Update Agent from the Windows Start menu if it isn't already open.




4. Select your vehicle on the Update Agent using the "Change" button.

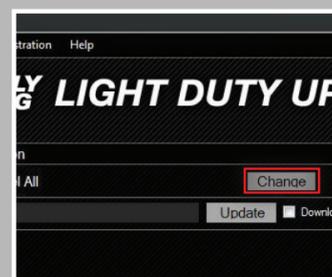

5. Select "Update".

Once the Agent indicates that the update is complete, place the MicroSD card into your GT and proceed with installing your GT (C).

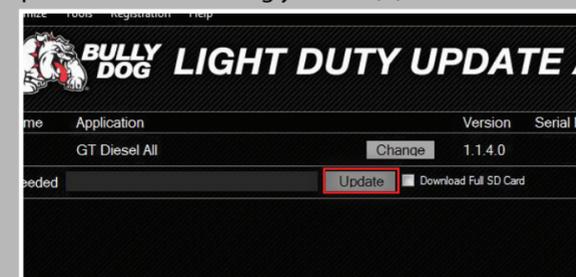


C: PHYSICAL INSTALLATION

1. Locate a key-on fuse.

a. It only has power when the key is in the "on" (or "run") position.

b. Use a 12-volt test light or your vehicle owner's manual to locate one.

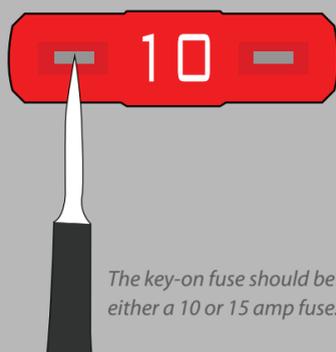

The key-on fuse should be either a 10 or 15 amp fuse.

2. Connect the power cable.


a. Crimp the fuse spade onto the power wire.

b. Remove the fuse.

c. Slide the fuse tap over one metal prong of the fuse.


d. Slide the fuse spade over the fuse tap and put the fuse back in the fuse box.

The black ground wire inside the power cable is not required.

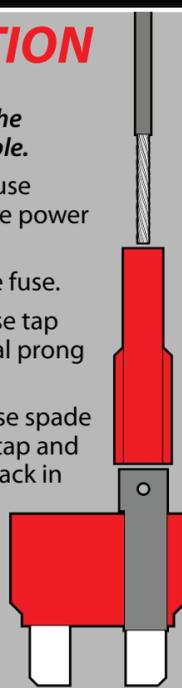


3. Connect the adapter plug.

a. Find your vehicle's diagnostic port (OBDII) under the dash.

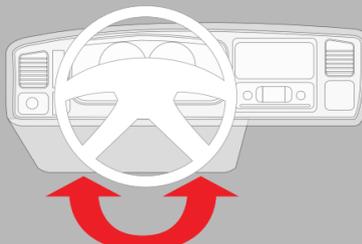


b. Connect the GT adapter plug to the port.

c. Run the power cable from the fuse box and connect it to the adapter plug.

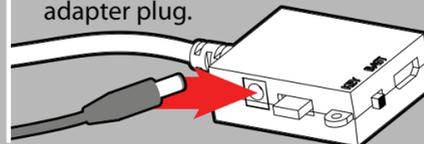


4. Install the HDMI cable.


a. Slide the switch on the adapter plug to "BATT".

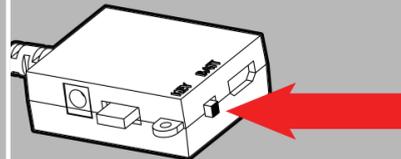

b. Connect one end of the HDMI cable to the adapter plug.

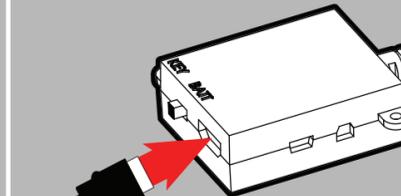

c. Run the cable under the dash or weather stripping.

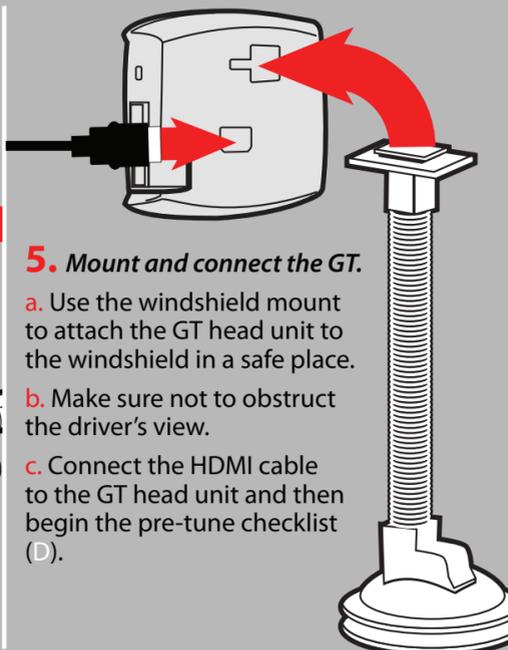

5. Mount and connect the GT.

a. Use the windshield mount to attach the GT head unit to the windshield in a safe place.

b. Make sure not to obstruct the driver's view.

c. Connect the HDMI cable to the GT head unit and then begin the pre-tune checklist (D).

D: PRE-TUNE CHECKLIST

1. Business hours

Install during regular business hours (Monday-Friday 8am-5pm MST). For assistance, you may contact Bully Dog Technical Support at 940-783-9915.

2. Check fuses

Check the included red fuse card if you have a GM vehicle, or a Ford 7.3L.

3. Internet access

In the unlikely event that technical support is needed, Internet access may be required to troubleshoot.

4. Allow enough time

Make sure you have at least an hour to complete the installation process.

5. Check your battery

Before installation, ALWAYS ensure that the batteries are fully charged. If you are not sure, connect a battery charger before you begin installation.

6. Turn electronics OFF

Leaving electronics on (stereo included) may prevent a successful download.

7. The download

Do not interrupt or disconnect the GT at any point during the download. Leave electronics off during the entire process. Proceed to (E).


E: GT DOWNLOAD

1. Turn your key to the "on" (or "run") position. Do NOT start the engine.


2. Choose "Change Vehicle" from the main menu, then select your vehicle.



3. Choose "Update GT Software" in the main menu and update. Do this once.

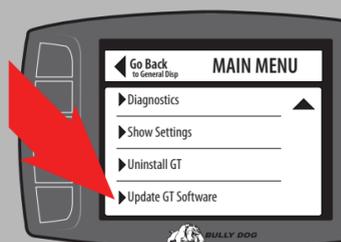

4. Choose "Install Download" in the main menu.

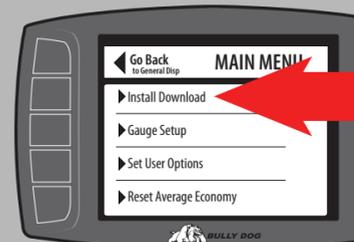

5. Follow the instructions on your GT screen

- You will need to turn your key to different positions and then choose "continue".
 - Do NOT start the engine when turning the key to the "run" (or "on") position at any other time during the download.
- You may be prompted to make choices about vehicle-specific settings such as the speed limiter. The GT owner's manual (available on www.bullydog.com) has more information on these settings.
- After you have completed the installation, turn the adapter switch to "KEY" for normal operation.